

True UV-C LED Sterilization Wand

Protect yourself and love ones everywhere at anytime



Stylish and Portable Product Design

True and High Efficient UV-C LED

Fast Sterilization

Fast Charging

Small and Light Weight Multiple uses



20mW High Intensity UV-C LED Instant and Efficient Sterilization on most surface

Create a safe environment for you




True UV-C LED Sterilizer Wand Say Goodbye to Invisible Danger Bacteria, mold, Spore and Virus may all around our environments

> Our UVC Sterilizer Wand Fast remove bacteria Assure you have a good rest at you own privacy





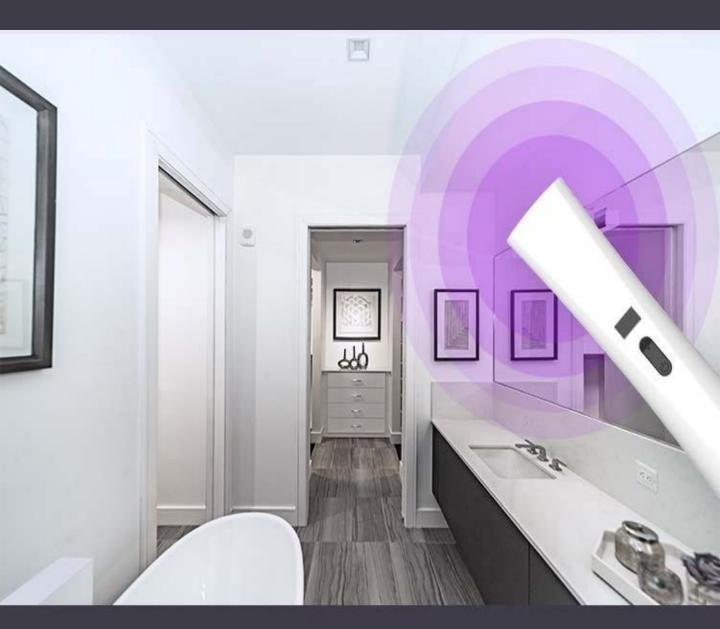

True UV-C LED Sterilization Wand Say Goodbye to Mold

The Bathroom is always wet and easy to breed the bacteria and mold




True UV-C LED Sterilization Wand Say Goodbye to Virus

Virus often to spread at the office And other crowed public places



True UV-C LED Sterilization Wand Say Goodbye to Bacteria

Inside the car have many frequent touch parts will grow up germ, such as car seat, handle, sterling wheel

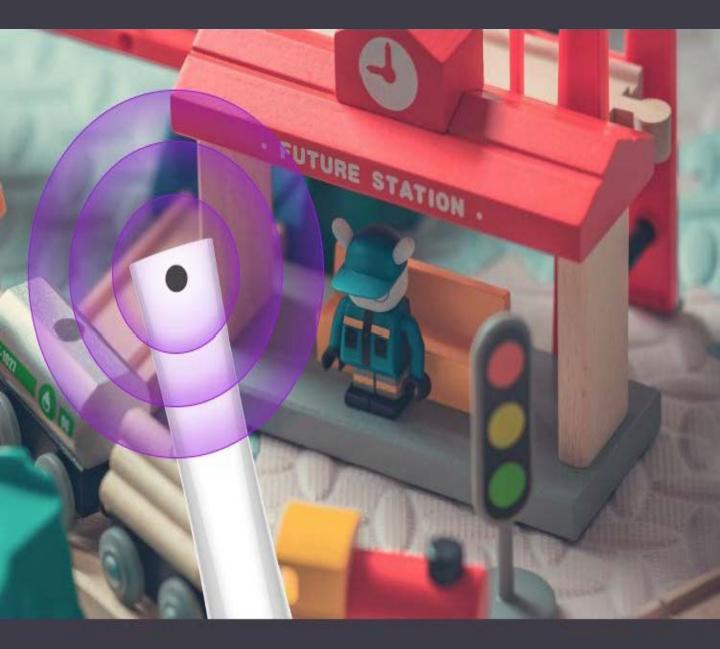

Kill bacteria with 3cm distance, and this cover 5cm circle area

Portable size for all bags

Easy to carry

Easy to use



880

0

Sterilization Time Display Visible sterilization time


Switch Function

"T" button is to control the sterilization Time

" ())" is on/off button



Bottom

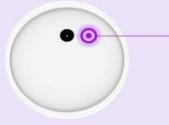

Charging hole

1000mA high capacity Able to use more than 2000 times on full battery

True UV-C LED Technology

Safe and Reliable Remains sterilization on surface Sterilization rod range 270nm–280nm





Sterilization Wand Spec .





WARNING UV-C emitted from this product. Avoid eye and skin exposure to unshielded product Follow Installation instructions and user manual.

How to Operate



Use Sterilization bar pointing at the object that need to be sterilized. We recommend for the best result of disinfection will be at 3cm distance away from the object.



Press """ for 3 seconds, display screen will show 00



Then press and hold-on "T" to start sterilization. User can decide when we finish the sterilization timing up to 90 seconds, release "T" button to stop sterilization.



Tap "T" button, this will automatically default sterilization to 30 seconds.



Product will automatically turn off after sterilization completed.



Before use, charge sterilization wand with the providing cable. When the LED displays show "99", the wand is fully charged and ready to use